

# Entry Capacity Gemini

---

## Setting Shipper Preferences

# Setting Shipper Preferences

---

This facility allows the user to set up validation limits for one or more Method of Sale and Location.

There are 4 validation parameters and limits:

- ◆ **Capacity** kWh – Upper and / or Lower
- ◆ **Price** - Upper and / or Lower
- ◆ **Value** - Upper and / or Lower
- ◆ **Forward Bid Limit** (QSEC only) – By Month (e.g not beyond a certain month)
- ◆ A warning message will appear if the user has breached their pre - set parameters. This can be overridden
- ◆ This screen can be accessed via the following path :- Deal - Capture – Set up Shippers Preferences
- ◆ All training material is located in the Xoserve web site  
<https://www.xoserveextranet.com/uklinkdocs/default.asp>